


mmWave Radar Module

MS72SF1

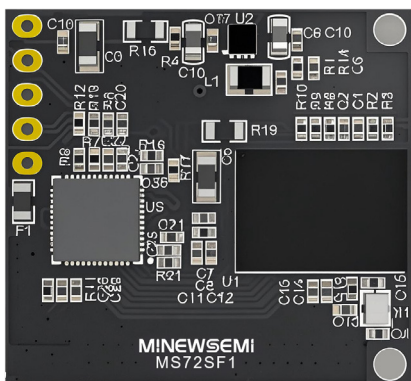

Datasheet

V 1.0.0



Version Note

Version	Details	Contributor(s)	Date	Notes
1.0.0	First edit	Vincle, Leo	2024.06.06	

Part Number

Model	Hardware Code
MS72SF11	-

Click the icon to view and download the latest product documents electronically.
https://en.minewsemi.com/file/MS72SF1_Datasheet_C_EN.pdf



MS72SF1

Cost-effective, high-performance, designed for accurate, privacy-friendly indoor human presence detection, motion tracking, and trajectory tracing

The MS72SF1 is a 60GHz millimeter-wave radar module designed for reliable indoor human presence detection and monitoring. Unlike traditional vision, infrared, or laser-based methods, it operates unaffected by lighting conditions, ensuring 24/7 performance while protecting personal privacy.

It supports multiple target counting, motion tracking, and indoor trajectory tracing, while also delivering precise detection and suppressing interference from curtains, plants, and similar obstacles. With its low cost, high reliability, and strong performance, the MS72SF1 is an ideal sensing solution for modern smart home applications.

FEATURES



Low-cost



High-reliability



High-performance



User motion
track detection



Accurate tracking and
positioning of multiple
people indoors

KEY PARAMETER

MS72SF1			
Operation Frequency	60~64GHz	Antenna Type	Aip antenna
Module Size	29.36×28mm	Upload Interval	≤30ms
Installation Method:	Ceiling Mount	Detection Distance	0.5 ~ 8m
Azimuth Coverage	±60°	Pitch Angle Coverage	±60°
Max Consumption	1.7W	Tracking Number of People	≤10
Firmware	AT firmware		

APPLICATION



Smart home
people detection



User motion
track detection



Indoor personnel
track detection



Industrial control
radar sensor



INDEX

1.Module Description	05
1.1 Module Function Description	05
1.2 Module Features	05
2.Electrical Specification	05
3.Pin Description	06
4.Pin Definition	06
4.1 Mechanical Drawing	06
5.Electrical Characteristics	07
5.1 Limit Rated Parameters	07
5.2 Typical Working Parameters	07
5.3 Module Consumption	07
6.Environmental Build	08
6.1 Hardware Components.....	08
6.2 Installation Position	08
7.Parameter Configuration	09
8.Radar Module Serial Data Communication Protocol Description	10
8.1 Communication Parameters	10
8.2 Message Output Protocol Format	11
8.3 Provide Example	12
9.Use of The Upper Computer.....	12
10.Housing Layout and Welding Requirements	13
11.Storage Conditions	15
12.Handling Conditions	15
13.Quality	15
14.Copyright Statement	16
15.Related Documents	16




1 MODULE DESCRIPTION

1.1 Module Function Description

No.	Function	Details
1	Multi-target tracking	1) It can realize the target tracking function of up to 10 people, including the target movement trajectory and the real-time position of the target; 2) Strong ability to suppress false targets (curtains, green plants, multipath, etc.); High sensitivity to detect micro-moving targets (stationary, shaking, waving, etc.).
2	Area division	The user can flexibly configure the detection area.


1.2 Module Features

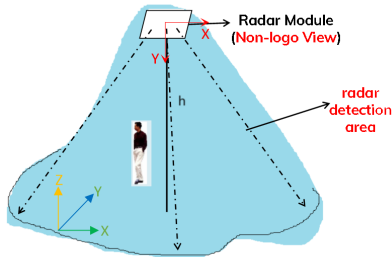No.	Function	Details
1	Installation scene	 Detection distance: 0.5~8m, (the effective projection ground is a circle with a radius of 4meters, and the installation height is 2.7meters) (Note: The detection distance is related to factors such as installation environment, human body volume, relative angle, and movement-trange. The above parameters are the test results of our company. Under different test conditions, the actual test results shall prevail)
2	Unaffected by the environment	Unaffected by temperature, humidity, dust, light, noise, etc.
3	Flexible parameter configuration	The detection threshold, function mode, etc. can be configured through the serial port.

2 ELECTRICAL SPECIFICATION

Parameter	Values	Notes
Working Voltage	2.5 ~ 3.3	Standard supply voltage 3.3V
Working Temperature	-40℃~+85℃	Storage temperature is -40℃~+125℃
Transmission Power	-20 ~ +8dBm	
Avg Current	110mA	Processing Period 100ms
Max Consumption	1.7W	
Module Dimension	29.36*28mm	
Quantity of IO Port	5	


3PIN DESCRIPTION

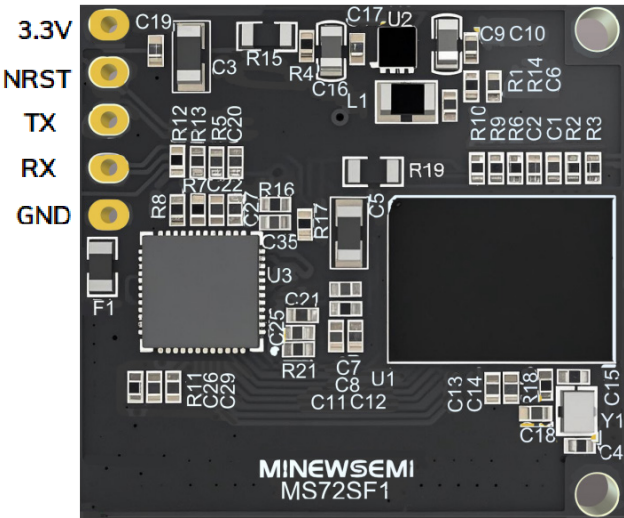

4PIN DEFINITION

Pin Number	Pin Symbol	Pin Type
3.3V	Power Supply	Power supply, input voltage 3.3V
NRST	Reset	Module reset pin
TX	UART TX	Used for UART serial transmitter (UART TX)
RX	UART RX	Used for UART serial reception (UART RX)
GND	Power supply ground	Ground supply pin

4.1 Mechanical Drawing

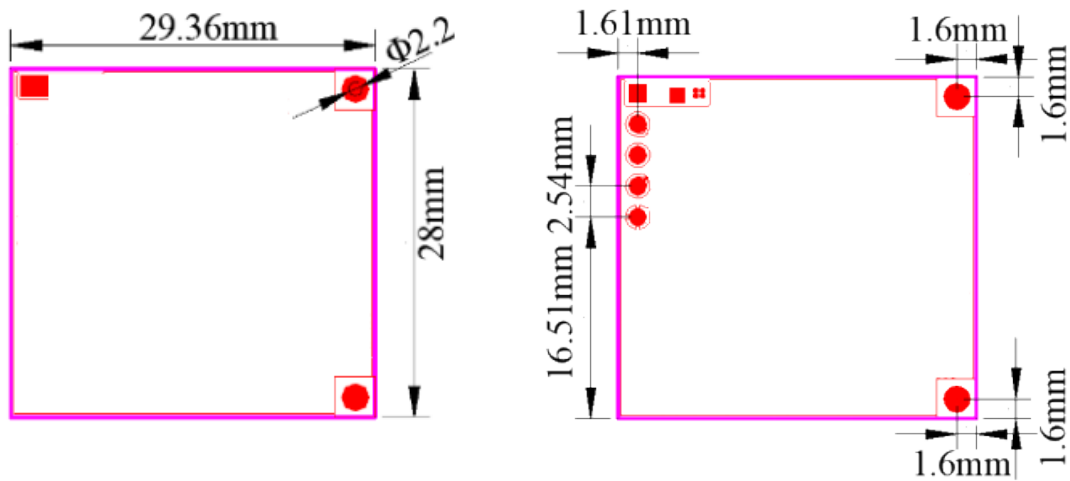



5 ELECTRICAL CHARACTERISTICS

5.1 Limit Rated Parameters

Pin	Min	Max	Unit
3.3V	-0.5	3.6	v
I/O (TX/RX/VO)	-0.5	3.6	v

5.2 Typical Working Parameters

Pin	Typical value	Unit
3.3V	3.0 ~ 3.3	v
I/O (TX/RX/VO)	-0.5 ~ VDD+0.3	v



Notice: VDD in the above table refers to the power supply input.

5.3 Module Consumption

The radar module contains RF devices, the current is about 530mA during the working time of starting RF transceiver, and about 80mA during the working time of shutting down RF transceiver. the average power consumption of the module is related to the frame period of the radar detection and processing, and if the radar works with a frame period of 100ms, then the average current is about 110mA. for the power supply input of the module, the power supply needs to be of high driving capacity, and the output current needs to be not less than 1A.



6 ENVIRONMENTAL BUILD

6.1 Hardware Components

NO.	Name	Figure	Description
1	Radar Module		Model NO.: MS72SF1
2	USB to TTL Module		USB to TTL module for serial port command configuration, antenna calibration and other functions.
3	USB Extension Cable		USB extension cable for connecting PC to USB TTL module


6.2 Installation Position

The module is installed on the ceiling with the antenna facing down, and the installation height is 2.3-2.8m. When installing the module, try to keep it as fixed as possible to avoid shaking of the module. The surrounding environment should be as open as possible, and the USB extension cable should be fixed as much as possible to avoid interference caused by the cable. See e.g. Figure 1.



Figure 1 Top Mounting Legend

7 PARAMETER CONFIGURATION

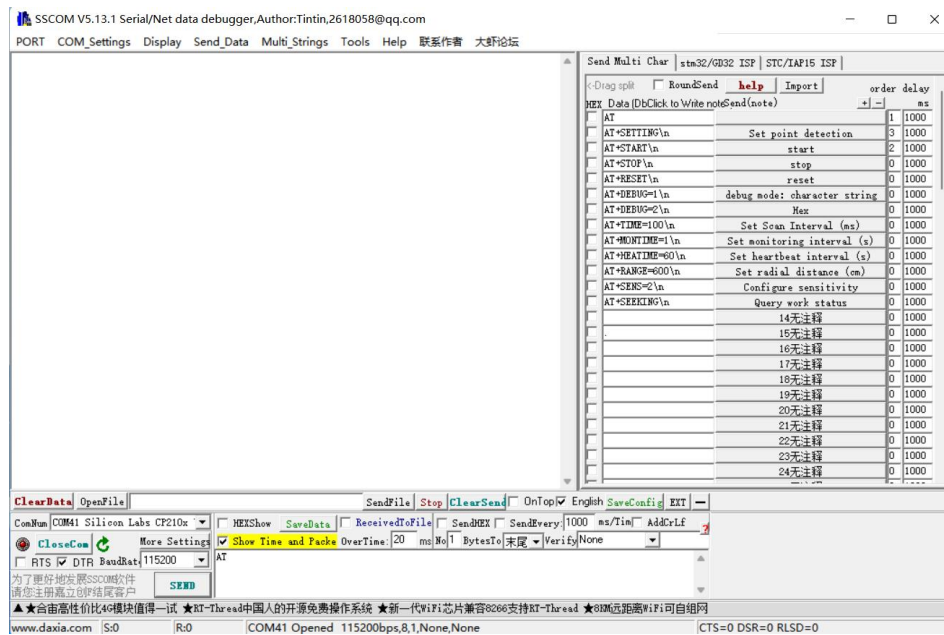

Adjust the corresponding parameters as needed. Note: After modifying the parameters, click the button behind the parameters to complete the parameter modification.

Common parameters are as follows:

Command	Interpretations
AT+START\n	Start Operation
AT+STOP\n	Stop Operation
AT+RESET\n	Module reset
AT+TIME=XX\n	Configure scan interval (unit:ms, range:100-10000, default value 100)
AT+MONTIME=XX\n	Configure monitoring interval(units:s, range 1-99, default value 1)
AT+HEATIME=XX\n	Configure heartbeat interval (unit s, range 10-999, default value 60)
AT+RANGE=XXX\n	Configure radar-to-boundary distance (in cm, range 100 - 2000, default 300)
AT+SENS=XX\n	Configure sensitivity (range 1-19, default is 2)
AT+SETTING\n	Fixed-point detection mode
AT+RESTORE\n	Restore Default Settings
AT+STUDY\n	Start Learning
AT+HEIGHT=270\n	Configure radar mounting height (in cm, range 250 - 320, default 270)
AT+HEIGHTD=270\n	Configure the module scanning height (in cm, range less than or equal to the mounting height, default 270)
AT+READ\n	Read version number and parameters
AT+DEBUG=X\n	Switching protocols (default 0, 1 string mode, 2 test mode, 3 operating mode)
AT+XNegaD=-300\n	Configuring X Negative Boundaries
AT+XPosiD=300\n	Configuring X Positive Boundaries
AT+YNegaD=-300\n	Configuration Y Negative Boundary
AT+YPosiD=300\n	Configuring the Y Positive Boundary

Typical example:

If the configuration is successful, it will return AT+OK, if the configuration fails, it will return Save Para Fail, and you need to resend the command.

As shown in Figure 2, Radar detection area diagrammed.


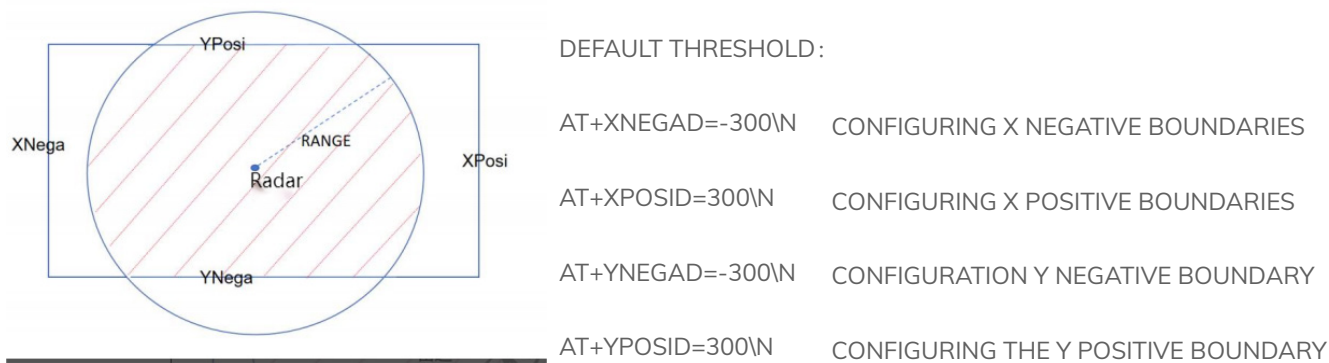


Figure 2 Radar detection area diagrammed.

HEIGHT SETTING

After sending AT+RESTORE\\n the module restores the default configuration, the previously learned information has been saved into the flash and the flash will not be restored.

Default radial distance: AT+RANGE=300\\n 3M
Default mounting height: AT+HEIGHT=270\\n 2.7M
Default probe height: AT+HEIGHTD=270\\n 2.7M

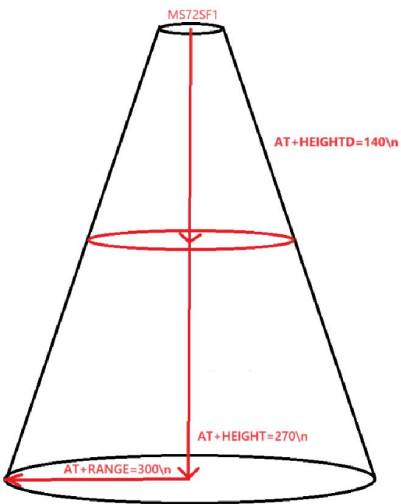

8 RADAR MODULE SERIAL DATA COMMUNICATION PROTOCOL DESCRIPTION

8.1 Communication Parameters

Baud Rate	115200
Data bits	8
Stop bits	1
Parity	NONE
Flow control	None

Existing firmware module can update the firmware by serial port burning



8.2 Message Output Protocol Format

Field	Number of bytes	Description
HEAD	8	Frame header, fixed\x01\x02\x03\x04\x05\x06\x07\x08
LENGTH	4	Whole frame data length (uint32)
FRAME	4	Frame number (uint32)
TLVs	4	TLVs=1 followed by point cloud information (uint32)
POINTLENTH	4	The length of the point cloud is always 0 (uint32)
TLVs	4	TLVs=2 followed by person information (uint32)
TRACKLENTH	4	Length of person data (number of persons = TRACKLENTH/32) (uint32)

Personnel 1	Q	4	Reserve(uint32)
	ID	4	Personnel markers (uint32)
	X	4	X/Y/Z coordinates of the person and the speed (float)
	Y	4	
	Z	4	
	Vx	4	
	Vy	4	
	Vz	4	

.....

Personnel n	Q	4	Reserve(uint32)
	ID	4	Personnel markers (uint32)
	X	4	X/Y/Z coordinates of the person and the velocity (float), in units: coordinates in m and velocity in m/s, to two decimal places. Single precision floating point type according to the standard for binary floating point arithmetic (IEEE 754),with the small end unwrapped before. https://www.binaryconvert.com/convert_float.html https://www.cnblogs.com/guanshan/articles/guan022.html
	Y	4	
	Z	4	
	Vx	4	
	Vy	4	
	Vz	4	



8.3 Provide Example

```

01 02 03 04 05 06 07 08 A0 00 00 00 CD 01 00 00 01 00 00 00 00 00 00
00 02 00 00 00 80 00 00 00 00 00 00 00 00 00 00 BE 36 D8 BE CD B6
DC 3E 26 C0 87 3F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 01
00 00 00 C6 36 2E BF D3 BF F2 BF B6 75 9F 3F 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 02 00 00 00 F4 D1 12 3E E1 E9 99 3F 3F 33 8E 3F
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 8E F1 38
BB FB B9 52 BF EE BE 02 40 00 00 00 00 00 00 00 00 00 00 00 00

```

01 02 03 04 05 06 07 08: Frame header

A0 00 00 00: total length of the frame is 160 bytes

CD 01 00 00: current frame count is 525 frames

01 00 00 00: TLV=1

00 00 00 00: constant 0

02 00 00 00: TLV=2

80 00 00 00: length of personnel data 128, i.e. number of personnel =
128/32 = 4 person

00 00 00 00: Reserved

00 00 00 00: Personnel 0

BE 36 D8 BE CD B6 DC 3E 26 C0 87 3F: The XYZ coordinates of Person 0
are -1.79, -3.83, and 1.34 respectively


00 00 00 00 00 00 00 00 00 00 00 00 00 00: XYZ speeds of 0, 0, 0 for person 0

00 00 00 00: Reserved

01 00 00 00: Personnel 1

9 USE OF THE UPPER COMPUTER

- 1) Use USB to TTL to power the radar with 3.3V voltage, then open "Radar_Demo.exe" (Check that it has been adjusted to HEX data mode (AT+DEBUG=3););
- 2) Select the serial port number as shown in Figure 3, the default baud rate is 115200, click "Open Serial Port";
- 3) Select "ceiling mount";
- 4) Click on "Start" and the radar starts to operate;
- 5) Selecting "R&D Mode" displays the point cloud, while selecting "Demo Mode" does not display the point cloud data;
- 6) As in Figure 3, the left side is 2D coordinates display, the right side is 3D display;
- 7) Click on the "Reset" button and the radar stops working.

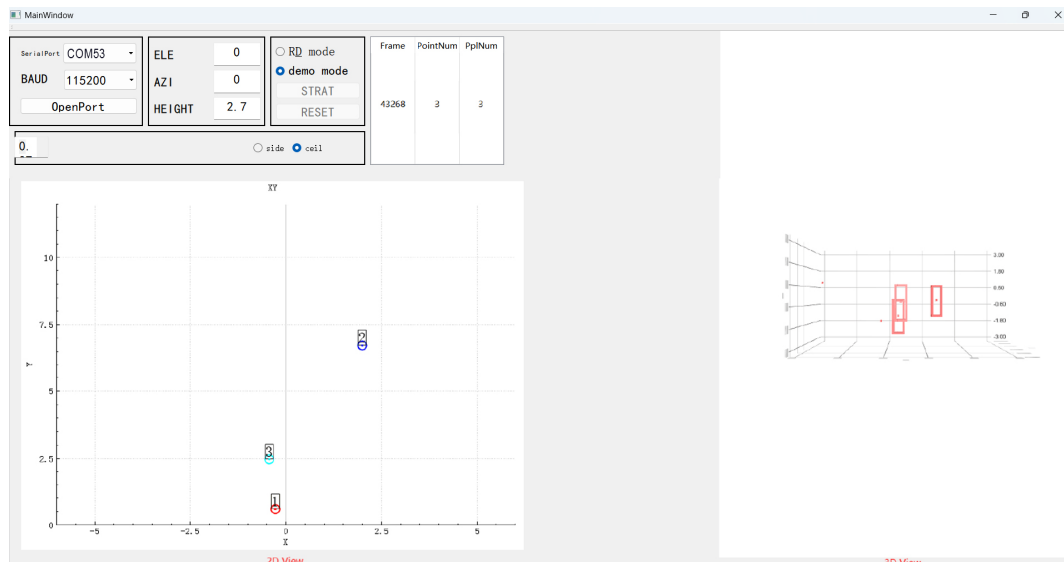



10 HOUSING LAYOUT AND WELDING REQUIREMENTS

- The module recommends a clearance of 2.5mm from the antenna surface to the inner surface of the housing, and a housing (PC/ABS material) thickness of 1.44mm or an integral multiple of 1.44mm.
- When mounting the PCBA, do not contaminate the chip. Ensure the chip is mounted flat and not warped.

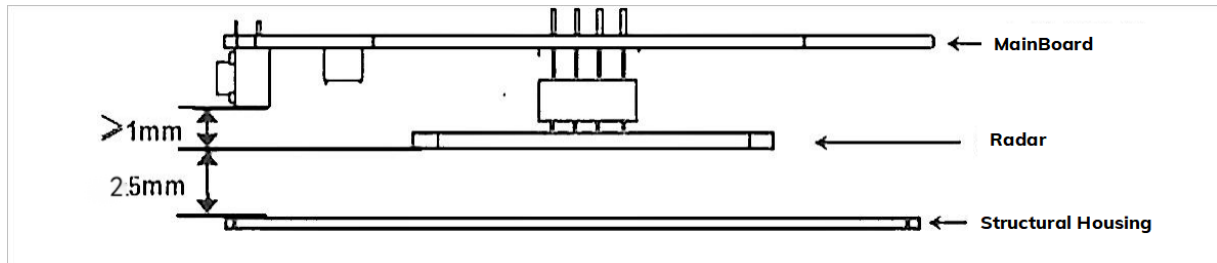


Figure4 Layout diagram of antenna and housing

FCC REGULATORY COMPLIANCE STATEMENT

§15.19 Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§15.21 Information to user

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

List of applicable FCC rules:

47 CFR Part 22, 24, 27, 90

Summarize the specific operational use conditions

This module can be used in IOT devices, the input voltage to the module is nominally 4V.

Limited module procedures

This module is a single module.

Trace antenna designs

The antenna is not a trace antenna.

RF exposure considerations

This Module complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Antennas

If you desire to increase antenna gain and either change antenna type or use same antenna type certified, a Class II permissive change application is required to be filed by us, or you (host manufacturer) can take responsibility through the change in FCC ID (new application) procedure followed by a Class II permissive change application.

Label and compliance information

Please notice that if the FCC identification number is not visible when the module is installed inside another device, then the outside of the device into which the module is binstalled must also display a label referring to the enclosed module. This exterior label can use wording such as the following: "Contains FCC ID:2BDJ6-MS72SF11" any similar wording that expresses the same meaning may be used.

§ 15.19 Labelling requirements shall be complied on end user device. Labelling rules for special device, please refer to §2.925, § 15.19 (a)(5) and relevant KDB publications. For E-label, please refer to §2.935.

Information on test modes and additional testing requirements

The OEM integrator is responsible for ensuring that the end-user has no manual instruction to remove or install module. The module is limited to installation in mobile application, a separate approval is required for all other operating configurations, including portable configurations with respect to §2.1093 and difference antenna configurations.

FCC other Parts, Part 15B Compliance Requirements for Host product manufacturer This modular transmitter is only FCC authorized for the specific rule parts listed on our grant, host product manufacturer is responsible for compliance to any other FCC rules that apply to the host not covered by the modular transmitter grant of certification. Host manufacturer in any case shall ensure host product which is installed and operating with the module is in compliant with Part 15B requirements. Please note that For a Class B or Class A digital device or peripheral, the instructions furnished the user manual of the end-user product shall include statement set out in §15.105 Information to the user or such similar statement and place it in a prominent location in the text of host product manual. Original texts as following:

For Class B

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

For Class A

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

11

STORAGE CONDITIONS

- Please use this product within 6 months after signing the receipt.
 - This product should be stored without opening the package at an ambient temperature of 5~35°C and a humidity of 20~70%RH.
 - This product should be left for more than 6 months after receipt and should be confirmed before use.
 - The product must be stored in a non-corrosive gas (Cl₂, NH₃, SO₂, NO_x, etc.).
 - To avoid damaging the packaging material, do not apply any excessive mechanical shocks, including but not limited to sharp objects adhering to the packaging material and product dropping.
- This product is suitable for MSL2 (based on JEDEC standard J-STD-020).
 - After opening the package, the product must be stored at ≤30°C/<60%RH. It is recommended to use the product within 3-6 months after opening the package.
 - When the color of the indicator in the package changes, the product should be baked before welding.
- Baking is not required for one year if exposure is limited to <30°C and 60%RH. Refer to MSL2 for exposure criteria for moisture sensitivity level. If exposed to (≥168h@85°C/60%RH) conditions or stored for more than one year, recommended baking conditions.
 1. 120 ±5/-5°C, 8 hours, 1 time
Products must be baked individually on heat-resistant trays because the materials (base tape, reel tape, and cover tape) are not heat-resistant, and the packaging material may be deformed at temperatures of 120°C;
 2. 90°C ±8/-0°C, 24hours, 1times
The base tape can be baked together with the product at this temperature. Please pay attention to the uniformity of heat.

12

HANDLING CONDITIONS

- Be careful in handling or transporting products because excessive stress or mechanical shock may break products.
- Handle with care if products may have cracks or damages on their terminals. If there is any such damage, the characteristics of products may change. Do not touch products with bare hands that may result in poor solderability and destroy by static electrical charge.

13

QUALITY

Cognizant of our commitment to quality, we operate our own factory equipped with state-of-the-art production facilities and a meticulous quality management system. We hold certifications for ISO9001, ISO14001, ISO27001, OHSAS18001, BSCI.

Every product undergoes stringent testing, including transmit power, sensitivity, power consumption, stability, and aging tests. Our fully automated module production line is now in full operation, boasting a production capacity in the millions, capable of meeting high-volume production demands.



14 COPYRIGHT STATEMENT

This manual and all the contents contained in it are owned by Shenzhen Minewsemi Co., Ltd. and are protected by Chinese laws and applicable international conventions related to copyright laws.

The certified trademarks included in this product and related documents have been licensed for use by MinewSemi. This includes but is not limited to certifications such as BQB, RoHS, REACH, CE, FCC, BQB, IC, SRRC, TELEC, WPC, RCM, WEEE, etc. The respective textual trademarks and logos belong to their respective owners. For example, the Bluetooth® textual trademark and logo are owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners. Due to the small size of the module product, the "®" symbol is omitted from the Bluetooth Primary Trademarks information in compliance with regulations.

The company has the right to change the content of this manual according to the technological development, and the revised version will not be notified otherwise. Without the written permission and authorization of the company, any individual, company, or organization shall not modify the contents of this manual or use part or all of the contents of this manual in other ways. Violators will be held accountable in accordance with the law.

15 RELATED DOCUMENTS

- [MinewSemi_Product_Naming_Reference_Manual_V1.0](https://en.minewsemi.com/file/MinewSemi_Product_Naming_Reference_Manual_EN.pdf)
https://en.minewsemi.com/file/MinewSemi_Product_Naming_Reference_Manual_EN.pdf
- [MinewSemi_Connectivity_Module_Catalogue_V2.0](https://en.minewsemi.com/file/MinewSemi_Connectivity_Module_Catalogue_EN.pdf)
https://en.minewsemi.com/file/MinewSemi_Connectivity_Module_Catalogue_EN.pdf



For product change notifications and regular updates of Minewsemi documentation, please register on our website: www.minewsemi.com

MINESEMI

SHENZHEN MINEWSEMI CO., LTD.



0086-755-2801 0353

<https://minewsemi.com>minewsemi@minew.com<https://store.minewsemi.com>

No.8, Qinglong Road, Longhua District, Shenzhen, China